



The system supplier
for all your medical packaging

With around 180 highly motivated employees, MEDIPACK AG provides total solutions:
From development, clean room blister production and sealing technology to a comprehensive range of packaging services. **Everything from a single source!**

Because we have our own development department, mould-making lines and a considerable depth of experience, we can very soon provide you with professional packaging solutions. Our process-oriented quality assurance system documents and guarantees the high quality of our products.

MEDIPACK AG
Mühlentalstrasse 184-188
8200 Schaffhausen
Switzerland
Phone: +41 52 630 36 36
Fax: +41 52 630 36 37
info@medipack.ch

MEDIPACK AG
German Subsidiary
c/o Dachser SE
Josef-Schüttler-Str. 5
78224 Singen
Germany
info@medipack.ch




Certified to ISO 13485:2016
Technical subject to change

www.medipack.com



**Medical blisters:
a routine formality!**

Whether you need a small- or large-scale production or anything in between, we specialise in the low-cost manufacture of high-quality medical blisters on qualified thermoformers in cleanroom class 8 or 7 as defined by ISO 14644-1. All blisters are subjected to a 100 % visual inspection.

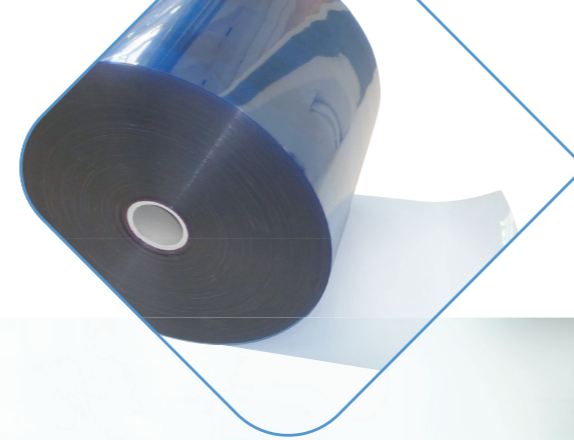

**Thermoforming-Film:
For high-quality blister packs for the
medical- and pharmaceutical area**

The targeted specialisation in the production of PETG does greatly improve product quality as there are no foreign particles in the system. Even small ultra-high-quality production runs to the tightest tolerance margins are possible.



**Heat sealing machines:
qualifiable!**

The heat sealing machines from the MEDIPACKER TS range were specifically developed for the medical industry and for use in the cleanroom. These compact machines are designed for universal use – all it takes is a quick tool change. All our machines meet the requirements of the FDA and GMP (DQ/IQ/OQ/PQ).



**Contract packaging:
quick and reliable!**


With us, your products are in the best hands. From complete incoming inspection, through to label printing, rinsing with Highly Purified Water (HPW) in cleaning and rinsing machines (according to Ph.Eur. 6), assembly, sealing and labelling. With the utmost care and using validated processes, sterile or non-sterile products are packed in pouches or blisters under class 7 clean room conditions (ISO 14644-1), boxed in a controlled area and made ready for external sterilisation.



**Development and toolmaking:
our challenge!**


In short time, we develop personalised packagings for ultra-stringent requirements and present creative solutions in an appealing 3D design. Sample and production tools are manufactured in our in house toolmaking shop. For this purpose we are using cutting-edge CNC machines based on CAD/CAM technology.

MEDIPACK AG: The system supplier for all your medical packaging

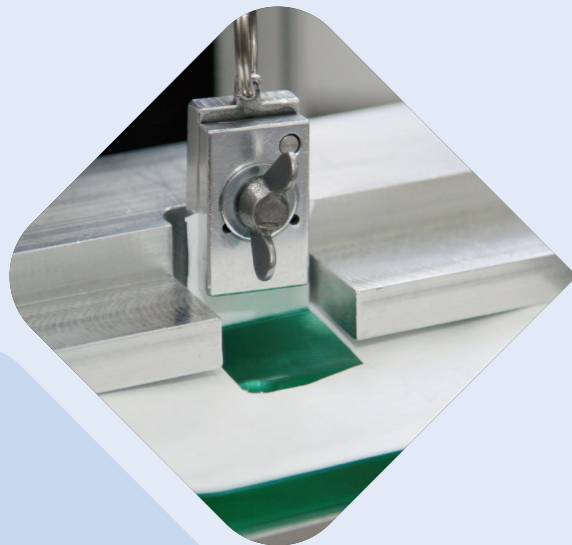

**Packaging validation:
professional support!**

Medical products and their packaging systems cannot be approved until their safety, suitability and capabilities have been certified. We assist you with packaging validation to ensure compliance with the wide range of regulatory requirements.

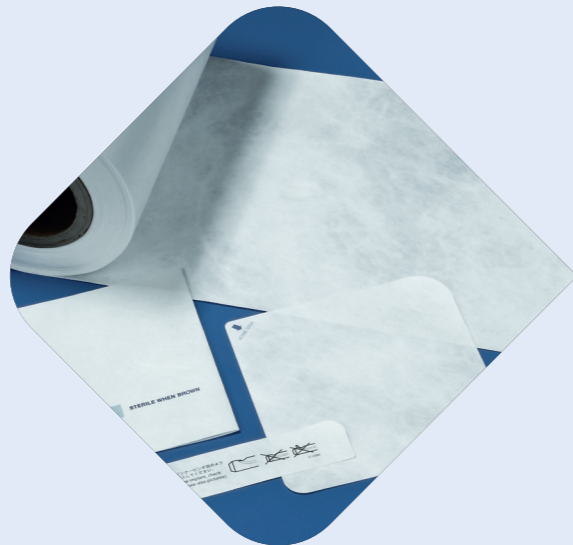

**Sealing lids also made from Tyvek®:
in any amount!**

We produce punched or cut, printed or unprinted sealing films in a wide variety of qualities, clean room-compliant and coordinated to your requirements.



**Medical pouches:
as flexible as our production!**

Sterilisation pouches made from PA6, tubular pouches from PE, protective pouches from PA/PE, peelable Tyvek® pouches with chevron seam and gas-tight aluminium pouches can even in small quantities be made quickly, flexibly and under the cleanest of conditions.



**MRP:
an efficient packaging system for
small parts!**

First, the multiple sheets are sealed, and then punched out on a separate machine. This inspired yet very simple system makes it possible to pack small parts of relatively large quantities more efficiently and save costs.



**Delivery:
Just in time!**

As an additional service, we can take care of inventory management and logistics. You receive your packagings in the desired quantity, on call, just in time.