

IDEAL
for CLEAN TRAY
transporters



PRONTOPACKER


Heat-sealing machine

For sealing preformed blister packs and trays with a sealing lid.


MEDIPACK AG
M E D I C A L P A C K A G I N G

PRONTOPACKER 2727

Width	348 mm
Depth	324 mm (with drawer and handle 454 mm)
Height	340 mm
Weight	34 kg without tools
Seal surface	270 x 270 mm, Max. depth of Blister 82 mm

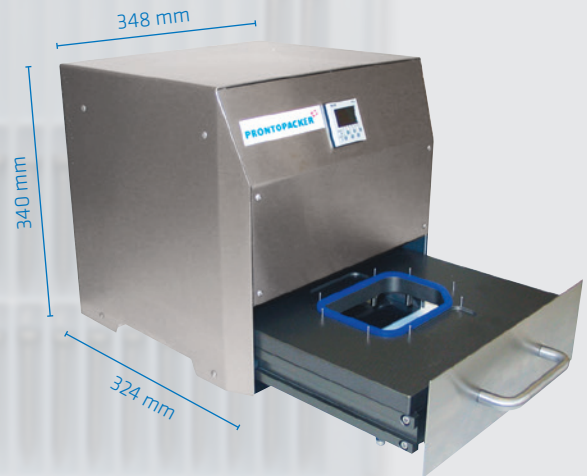

IDEAL
for CLEAN TRAY
transporters

The PRONTOPACKER is a compact sealing machine for sealing preformed blister packs and trays with a sealing lid. No compressed air required.

Design	Stainless steel cover panels Aluminium parts ALTEF-coated
Sealing temperature	PLC-programmable and can be set to any degree centigrade up to 190 °C Control accuracy at 130 °C ± 1.0 °, at the heating plate Measured across five points, PID control system
Sealing force	4 kN, Repetition accuracy within 0.5 kN, but not qualifiable
Sealing time	Can be PLC-programmed from 0.5 to 9.9 seconds Can be set to any tenth of a second Repetition accuracy less than 0.15 seconds
Output	Approx. 5 cycles per minute excluding filling, insertion and removal of the packs
Electrical connection	230 V PNE 50 Hz/max. 1700 W
Warranty	Two years for all machine parts, except wear parts, transportation and travel costs, and labour

MEDIPACK AG
Mühlentalstrasse 184-188
8200 Schaffhausen
Switzerland
Phone: +41 52 630 36 36
Fax: +41 52 630 36 37
info@medipack.ch

MEDIPACK AG
German Subsidiary
c/o Dachser SE
Josef-Schüttler-Str. 5
78224 Singen
Germany
info@medipack.ch



Certified to ISO 13485:2016
Technical subject to change

www.medipack.com